
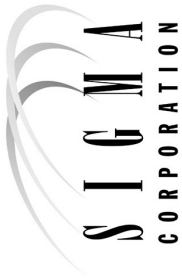


ACCESS DOOR TEMPLATE

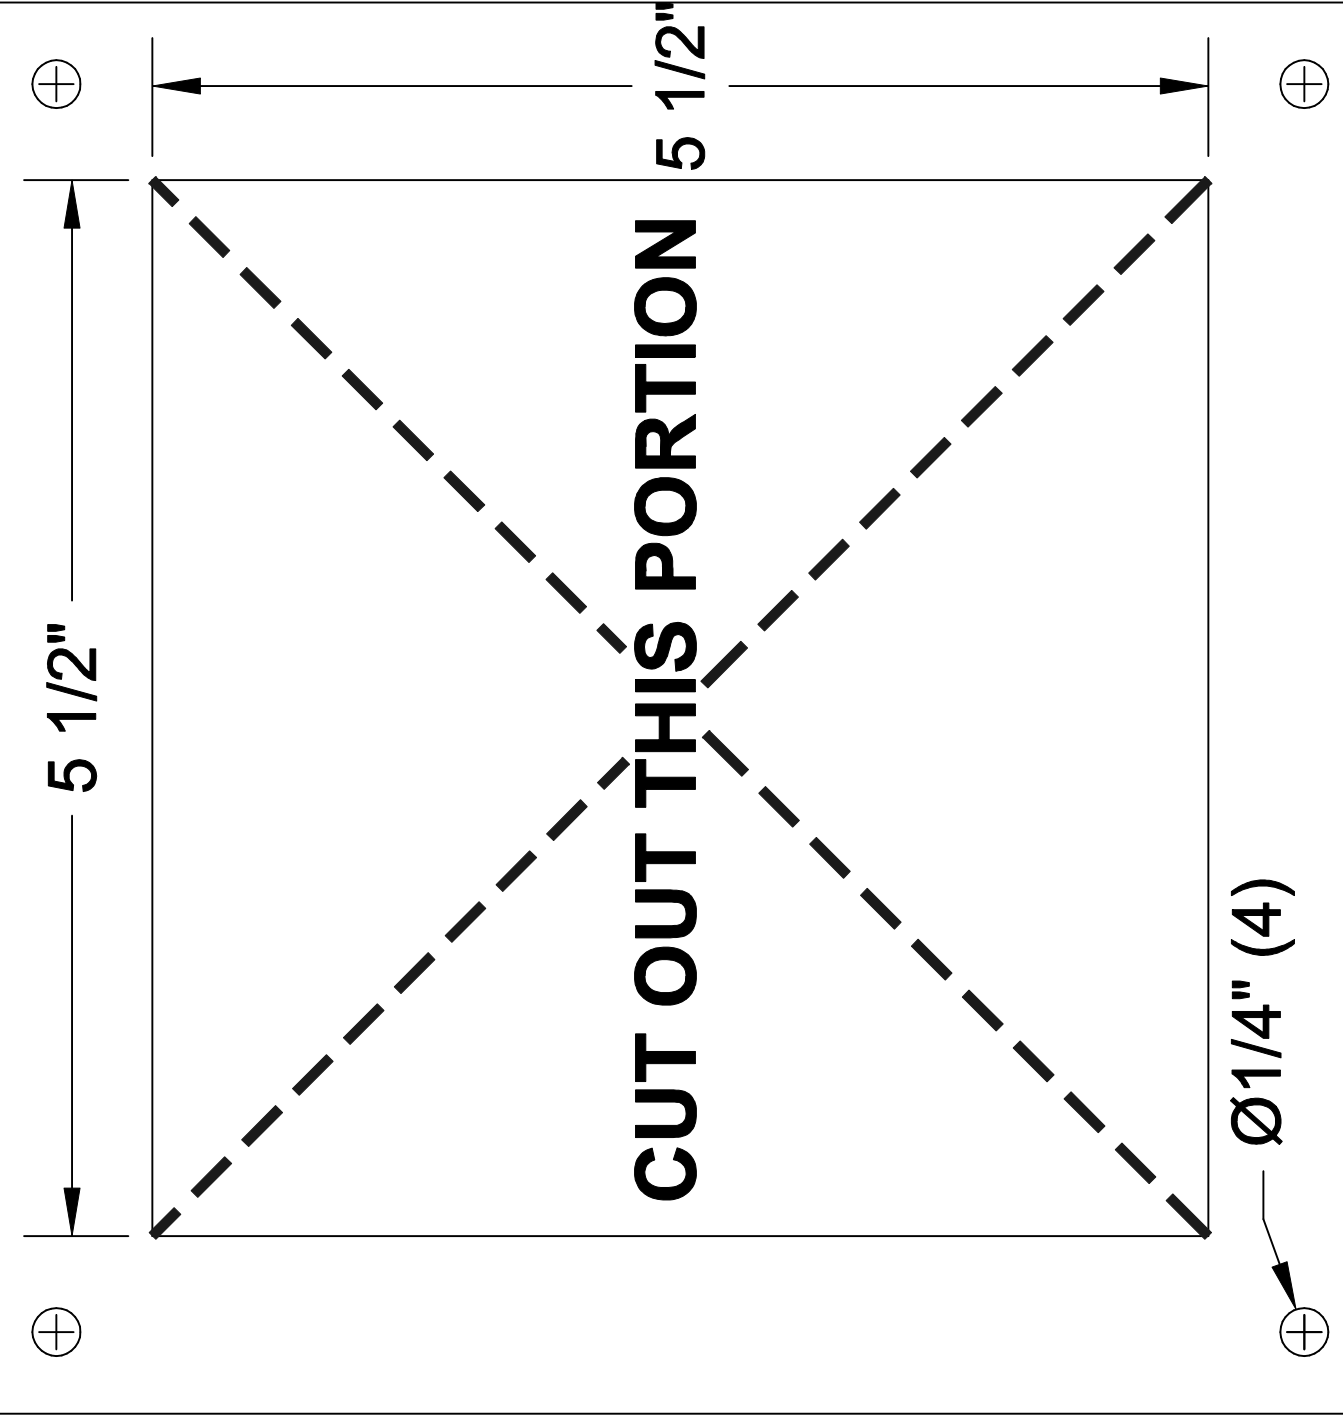

NOTES:

-USE 1/4" DRILL BIT TO DRILL OUT HOLES FOR ACCESS DOOR STUDS (holes are 6 1/2" on centre)

-REMOVE INNER PORTION FOR ACCESS OPENING